



## **BEGINNER ELECTROSEX KIT**



## **Instruction Manual**

## **IMPORTANT INFORMATION**

### **CAUTION!**

Electrosex kit can cause serious harm. Certain people should not use electrosex devices. All users must read this section before using this Beginner Electrosex Kit. If you have any questions or concerns consult a physician or the manufacturer, Zeus before attempting to use devices.

### **IMPORTANT:**

Electrosex devices are NOT for use by or on anyone with implanted electronic devices such as pacemakers, defibrillators, drug pumps. People with heart problems, heart disease, epilepsy, brain disorders, nervous system disorders, a history of strokes or seizures, serious skin problems or similar medical conditions should not use this product. Pregnant women or women who might be pregnant or anyone under the age of 18 should also not use this device. Electrical currents passed through the heart, neck or head can be fatal. The Beginner Electrosex Kit is for external use only

The Beginner Electrosex Kit should only be used by consenting healthy adults who understand all the warning and operating instructions. Discontinue use if excessive or unusual soreness, numbness, pain, skin irritation or other conditions develop. If conditions continue, consult a physician and the manufacturer immediately.

By using this Beginner Electrosex Kit you acknowledge erotic electro stimulation (e-stim) has associated risks. If you are unwilling to accept these risks, or are someone who should not use this product, contact your dealer for a full refund.

### **Please follow these safety instructions to reduce e-stim risks:**

Make sure the device is turned off when connecting and disconnecting electrodes. Touching adhesive pads or connectors with the device on may run a current through the heart area.

Only use attachments and or accessories designed for the Beginner Electrosex Kit. When using the electrodes at least 0.5 square inches (3.2 sq. cm) of surface area should be against the skin. Never use body piercings or adhesive pads containing toxic materials such as lead.

Use caution in the operation of this device. E-stim can cause muscle contractions and sudden stimulation at high levels which may result in injuries. Use the device on yourself first until you are familiar with how it works before using it on someone else. Always start stimulation with the levels turned all the way down and strengthen the level slowly. The Beginner Electrosex Kit should be used on one person at a time and no more than 3 hours per week. This device should never be used to treat a medical condition.

Do not operate a motor vehicle or dangerous equipment while using an electrosex device. Do not use while sleeping, bathing, swimming or in wet conditions. Never use a stimulation device on a person who is unable to respond in the event that a problem occurs.

Do not attempt to disassemble, repair or modify your electrosex unit. Use a 9 volt battery only. Ensure that each lead wire is connected to the output sockets, as damage can occur if improper connections are attached.

### **USER AGREEMENT:**

Use of the enclosed product indicates the purchasers full acceptance of the User Agreement. Purchaser acknowledges erotic e-stim has associated risks and agrees to be bound by all terms and conditions of this User Agreement.

### **Limitation of Liability:**

Purchaser assumes all risk and liability for loss, property damage or injury to purchaser or user as a result of use or misuse of this Beginner Electrosex Kit or Zeus products. Zeus and their related companies, members, agents, employees, affiliates and consultants will in no event be liable to the purchaser, or any persons or entity claiming through the purchaser, for direct, indirect, consequential, incidental or other damages under any theory of law as a result of use or misuse, even if the manufacturer is aware of the possibility of such damages.

## **Indemnity:**

Purchaser hereby releases, and agrees to indemnify and hold harmless, the manufacturer from any and all claims, demands, causes of actions, liabilities, damages, costs and expenses, including attorney fees, arising out of the use or misuse of this product.

**Binding Arbitration:** Purchaser agrees that any claim or dispute arising out of use or misuse of this product shall be submitted to an independent and objective arbitrator for binding arbitration. The purchaser agrees binding arbitration shall be the sole remedy for any claim. The purchaser expressly waives their right to file a lawsuit in any civil court seeking remedies from the manufacturer, except to enforce a legally binding arbitration decision.

**Non-Acceptance:** The Purchaser may return the unused product for a full refund without penalty if they do not accept this agreement.

## **INTRODUCTION**

The Beginner Electrosex Kit is the perfect package to get started with electrosex stimulation. Its simple, portable, and comes with all of the necessary attachments. This kit includes a power unit, two sets of tens pin lead wires, four adhesive pads, a 9 volt battery and bonus electrosex clamps so you can get started right away!

Its easy to adjust the intensity, pulse, amplitude, and rate by gently adjusting the dials. It has two dial outputs, each capable of several different intensity levels.

Once a user has mastered the accessories included in this kit, they can move on to explore the extended line of Zeus Electrosex accessories and open themselves up to whole new dimensions of pleasure.

## **WHAT IS ELECTROSEX?**

The Electrosex device is designed to send electrical impulses through terminals and attachable toys placed on the lower body. Easy to use rotary controls deliver the pulse amplitude at the rate of your choice. The simple mode selector switch makes adjustments easy and endlessly refined. This unit delivers delicate and hyper-intense skin and nerve stimulation.

## **PRECAUTIONS**

- Read the manual thoroughly before using the product.
- Always use below the waist.
- Keep out of reach of children.
- Turn the power unit off before applying, removing or changing electrodes.
- Do not immerse the power unit or accessories in any liquids.

## **SIDE EFFECTS**

Skin irritation may occur beneath or around the adhesive pads sites. If skin irritation persists discontinue use.

## **COMPONENTS OF THE BEGINNER ELECTROSEX KIT**

This Kit Includes:

- |                     |                        |
|---------------------|------------------------|
| • 4 Adhesive Pads   | • Instructions         |
| • Power Unit        | • 2 Sets of Lead Wires |
| • Electrosex Clamps | • 9 Volt battery       |

## TECHNICAL INFORMATION

Specifications for the Beginner Electrosex Kit

Power Source : 006P DC 9 Volts Dry Battery

Pulse Amplitude : 0-80mA

Pulse Rate : 2Hz-150Hz Adjustable Control

Pulse Width : 50uS - 250uS Adjustable Control

Function Mode : Modulation mode , Normal mode, Brief mode

Auto Timer : 20 Minutes

Channel : 2 Channels

Weight : 145 Grams (Battery Included)

Dimensions : 33 (H) X 82(W) X 95(L)mm

## USING THE ELECTROSEX KIT



### Amplitude Controls

Control knobs 1 and 2 adjust the stimulation intensity levels. The amplitude controls are marked from 1 to 8, indicating the increase in intensity levels of electrical currents. Each amplitude control also incorporates an ON/OFF switch. When either channel is turned on, the Green/Red indicator light will come on.

### Indicator Light

When either channel is turned on, the green indicator light will be continuously lit. The red indicator light will follow the pulse rate and have a blinking/continuously lit indication display. The lower frequencies are indicated by a blinking light, and with higher frequencies it will continue to glow. When the battery is low or the unit has been operating over 20 minutes, the power indicator light will change from green to red, and the unit will shut itself off.

## CONTROLS & INDICATOR

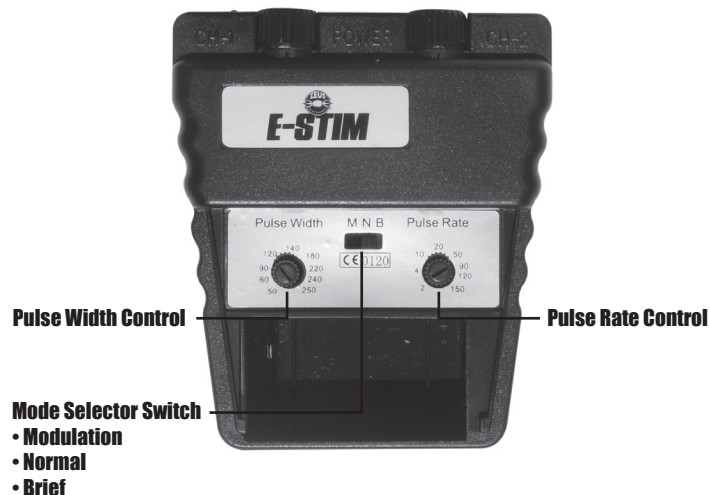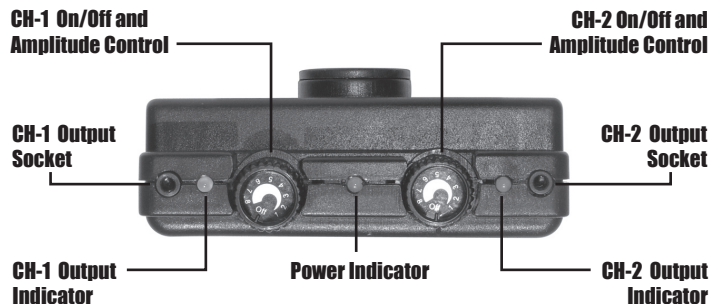

## OUTPUT JACKS

CH-1 and CH-2 designate the output connections for channels 1 and 2.

## BELT CLIP

This attaches the stimulator securely to your belt for secure mobility.

## PULSE RATE CONTROL

This control regulates the frequency of stimulation from 2Hz to 150Hz pulses per second.

## PULSE WIDTH CONTROL

This control adjusts the duration of each individual stimulation pulse width, from 50-250 microseconds.

## MODE SELECTOR SWITCH

**M-Modulation Mode -** Contraction 4 sec.

Relaxation 1 sec.

Pulse width and pulse rate are adjustable.

**N-Normal Mode -** Pulse width adjustable

50-250 microseconds

Pulse width adjustable 2-150Hz

**B-Brief Mode -** Contraction 0.2 sec.

Relaxation 0.2 sec.

## AUTO TIMER

For safety purposes, this unit will shut itself off after 20 minutes. To reset the timer, simply turn both amplitude controls to OFF then turn it back to the ON position.

The green light will change to red color after 20 minutes and the unit shut itself off. The green light will disappear when both the amplitude controls are set to off.

## THE GREEN LIGHT

The green indicator will light up when the amplitude control is turned on, this green indicator will change to red after 20 minutes when the unit is about to shut itself off.

## OPERATING PROCEDURE

The system is quite easy to operate and maintain if these instructions are followed.

1. Both amplitude controls 1 & 2 should be turned to off.
2. Open battery compartment and insert 9 volt battery.
3. Insert lead wire pins into adhesive pads so that no bare metal wires are exposed.
4. Plug the pair of lead wires into the CH-1 and CH-2 output sockets.
5. Place adhesive pads on clean, unbroken skin.
6. Check and adjust the frequency, width, and mode selector controls to ensure they are set at the lowest values.
7. Always increase the amplitude control slowly.
8. Be sure the amplitude is off before applying or removing any units from skin or power unit.

## SKIN CARE

Following these simple direction for proper skin care will reduce the chance of skin irritation.

1. When removing the adhesive pads, slowly pull from the skin in the same direction of hair growth.
2. Press pads firmly in place to ensure consistent electrical contact.
3. Do not apply pads to broken skin.
4. Do not stretch pads or the skin when applying the adhesive pads.
5. Shaving excessive body hair will help the adhesive pads stick better. If shaving irritates the skin, carefully trim excess hair with scissors.

**Note:** If skin irritation does develop, discontinue use immediately.

## Maintain Your Beginner Electrosex Unit

Do not use household cleaners, as the chemicals may damage the plastic parts of your unit. We recommend using a soft cloth dampened with quality rubbing alcohol.

\*Exposure to excess moisture may damage electrical components.

## USA LIMITED WARRANTY

Zeus product purchased by customers residing in the USA are warranted by the manufacturer against manufactured defects for one year from the date of purchase. This warranty does not cover misuse, abuse, wear and tear or damage to units that have been disassembled or tampered with. No other warranty of any kind, verbal or written, shall bind Zeus and their related companies, members, agents, employees, affiliates and consultants. Further, the manufacturer shall not be liable for direct, indirect, incidental or consequential damages caused by the use or misuse of this product, regardless of the legal theory on which the claim is based. Without limitation, the purchaser assumes all risk and liability for loss, damage or injury to purchaser, others and property that may occur as a result of use or misuse of this product. Recovery of any kind against the manufacturer shall not exceed the purchase price of the product. Any claim or dispute arising out of, or related to, the use of Zeus products shall be submitted to an independent and objective arbitrator for binding arbitration. Binding arbitration shall be the sole remedy for any warranty dispute or claim, by acceptance of the User Agreement, the purchaser expressly waives their right to file a lawsuit in civil court seeking remedies from the manufacturer, except to enforce a legally binding arbitration decision.

Zeus will repair or replace defective products at no charge as stipulated herein with new or reconditioned parts or products during the warranty period. Contact Zeus for more information obtaining services. A copy of the dated sales receipt is required for warranty repairs. The customer is responsible for shipping cost and properly packaging the unit. Warranty rights vary from state to state. This Limited Warranty shall not extend to anyone other than the original purchaser, is non-transferable and states your exclusive remedy.